

## Digital Effects

- Push Pic. E button to get digital effects
  - Strobe
  - Gain-up
  - Trail
  - Mosaic
  - Mirror
- Cinema and wipe effects can be found on the menu
  - Press menu then use wheel for moving to other options

## Turning Off the Camera

- Turn on/off switch to off
- Push down eject button to eject tape
- Pull out tape and close tape slot
- Take out battery by pushing release button and pulling battery up and out
- Charge battery in its slot
- Put lens cap on
- Put camera away

Okay, now it's YOUR turn.  
**ENJOY!**

# The Panasonic AG-DVC7 Digital Camera

## A Tutorial



*Prepared by*  
Charley Clarke and Will Harris  
Advanced Multimedia Productions  
Luther Jackson Middle School

## Turning on the Camera

- Take off lens cap
- Insert battery by pushing battery in slot then pushing down
- Push down eject button for tape slot to open
- Insert tape into slot
- Close tape slot
- Turn switch in right panel from off to on



Battery being inserted

## Using the Camera Mode

- Press mode so light is lit in camera circle
- Press record (the red button) to start taping
  - on right side panel
  - on top bar by lens
- Zoom in and out (T or W) to get wider and tighter shots
  - above right hand strap
  - on top bar by lens
- Press snap shot button for snap shot like effect

Mode and on/off switch are all located between the right hand strap and the Video slot

## Using the VCR Mode

- Press mode so light is lit in VCR circle
- Press different buttons on left side panel to control viewing
  - Rewind
  - Play
  - Fast-Forward
  - Stop
  - Pause (Still)
- Use wheel to control volume while watching the tape



Side panel including screen and VCR buttons