

 
TROUBLE SHOOTING

You may run into some of these problems, and we have the solutions!

- If you lose your first Wiimote, take another Wiimote and use the syncing process. That is explained in the “First Setup, Syncing Wiimote” section on the second panel, second paragraph.
- If your Wii freezes and won't do anything, hold the power button for about 5-7 seconds until the power button's light turns red. Turn it back on.
- If anything unexpected happens to your game, select the home button and looking at the main menu color. If it's not the usual white color, turn off your Wii and let it cool down.
- If your Wii won't turn on, unplug everything and wait for at least 5 minutes. Replug and try again.


Other Information

- You can also play Gamecube games on the Wii. To plug in the Gamecube controllers, open the top cover and then plug in the controller.

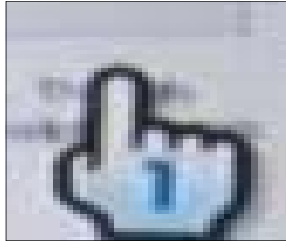

The Wii screen pointer/clicker

- To use Gamecube memory cards, open the smaller top cover of the Wii and put the memory card inside.
- If you hear a beeping sound, press the bottom-right button from the main menu of the Wii. It looks like an envelope. This brings up the “mail” section.
- If your Wiimote moves too much or too little compared to your movements, move to the main menu, and in the bottom-left corner, click the settings button, select the Wii, and scroll to the right with the arrows until you come to the title “sensor bar” and change the number.

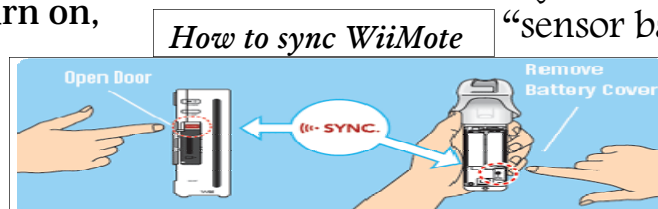

The Wii Basics



*Prepared by
Corey Ehle
and*

Advanced Multimedia Productions
Luther Jackson Middle School

You've just purchased your new Nintendo Wii.

You're excited, right?!

Now you need to set it up.

Well, this guide will outline the basic setup, without


500 technical terms per page!

Cables and Plugs

1. Take the 3 colored cords, (red white and yellow) and find the same colored outlets on the back of your TV set. Plug them all in.
2. Take the sparkplug and plug that into a surge protector or outlet.
3. Take the Sensor bar (small black bar) and set it above or below the TV set.
4. Plug all three items into the back of the Wii.

Setting Up, Syncing Wiimote

In the beginning, you will automatically be guided by your Wii system. To sync a Wiimote, open a little white cover on the front of the Wii, and using a thin item, such as a straight pin, select the red SYNC button. Then select the Connect button on your Controller (this is located in the battery section on the bottom of the controller).

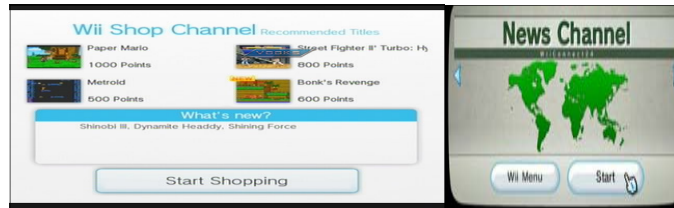

Here are some Wii Channels

The Disc Channel – Plays game disks, such as Wii Sports.

Mii Channel – Create your own Wii character.

Picture Channel – Download pictures from a digital camera onto your Wii.

Wii Shop Channel – Buy items and downloads with Wii points, which you can buy from many stores (e.g. Target).

Forecast Channel – See the local weather.

News Channel – Find out about the local news.

Setting Up Your Game

- **To start your game, take your game disk out of the box and insert it so the design side faces away from the power button.**
- **Open the disk channel and on the bottom-right corner of the Wii, click the start button.**

Updates and Game Play

To update your Wii, go to the bottom-left corner and click on the Wii logo. Click the other Wii picture that will pop up, and click the settings button. Scroll to the right by clicking the arrow until you find the update button, and click the update button.

MULTIPLAYER

In order to open a multiplayer game, select the home button (blue house button on the Wiimote). Select the bottom black line. At this menu, click re-connect.