

The Basics

Record Mode

- Located on the “On” and “Off” dial, is a red button.
- Pressing the red button starts the recording.
- To pause or stop the recording, simply press the red button again.




Play Mode

- The play button is located on the bottom of the camera near the front.
- Press the play button to watch the recorded video on the LCD display .
- Note: using the play mode requires a great deal of battery power.



Off Mode

- Turn off the camera by reversing the steps above.
- To eject the tape, press the eject button and remove the tape.

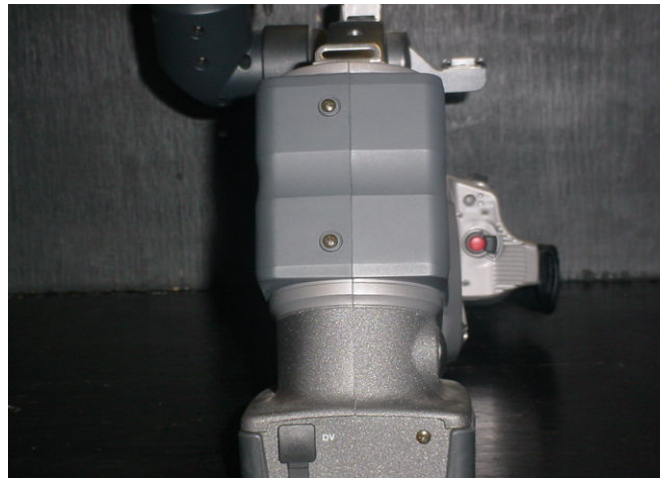

Produced in partnership with
Luther Jackson Middle School



Ryan Ly 2005

**Fairfax County
Public Schools
Department of
Information
Technology**

The Panasonic AG-DVC7



**TMPC
Loan Pool**

703-503-7430

The Battery

- Insert the battery on the right side of the camera.



- To remove the battery, push the button on top of the battery.
- Push the button down and push the battery up.
- After the battery is removed, charge it in the charger.
- The battery is charging correctly when a green light is on.



Getting Started

- To turn on the camera, turn the black dial on the right side until the arrow is pointing to the on label.
- To insert the tape, press the eject button and wait for it to completely open.
- Insert the tape and close, when closing push the lock button.
- View the image by the LCD display or the eyepiece.



Effects

- On the left side of the camera there is a button that says digital effects.
- Click on that and scroll through with the lever near the digital effects button.
- There are numerous effects on the Panasonic AG-DVC7.

Some effects include:

- Black and white
- Mosaic
- Art
- Sepia

