

Effects

- Press the button behind the LCD screen, which says digital effects.



- For other effects, scroll down to effects, using the wheel that says "Push" (located behind the LCD screen). To select effects, push that same wheel. Scroll and select an effect.



- Select an effect by adjusting the on/off button. Press it two times to have the effect displayed on the screen.
- To turn it off you press on/off button once .



Produced in partnership with
Luther Jackson Middle School



Fatumah Abdulrahman 2005

**Fairfax County
Public Schools
Department of
Information
Technology**

ZR60 Digital Video Camcorder




**TMPC
Loan Pool**

703-503-7430

Turning the Camera On and Off

- To insert the battery, remove the battery cover.
- Press the battery release button and push the battery down gently. The battery must be in correctly in order for the camera to turn on.

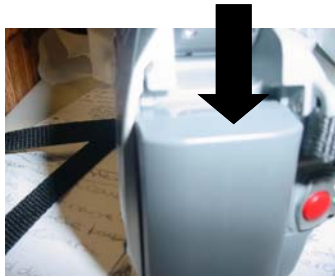

- The red button next to the battery, is the camera controls. This dial turns the camera off, on and plays previous recordings on that tape.
- Look to the right of the red button to see a little tiny green button. The green button designates the camera mode.
- To turn on, press the tiny green button.



Inserting and Removing The Tape

- Insert the tape on the bottom of the camera.



- The battery must be in the camera in order to insert or eject the video tape.



- When inserting or ejecting the video tape, slide the OPEN / EJECT button as far to the right as possible.



- Please follow the directions stating, "DO NOT PRESS THIS PART." This particular part that holds the videotape will insert and eject from the camera automatically. Forcing this piece of equipment can cause the camera to malfunction.

Taking a Picture

- To take a still photograph, press the gray button that says "Photo."



- To create the desired shot composition, zoom the lens in and out using the W-T slide button. W stands for wide (zoom out) and T stand for tight (zoom in).

