 




CHORAL RISER SAFETY



Office of Safety and Security Fact Sheet

Portable choral risers are designed to provide a stable surface to hear and see singers. Nearly all choral risers used by FCPS are made by the Wenger Corporation, a high performance company. Accidents occur when the risers are not properly set up or properly maintained.

SET UP

 
- **Follow instructions**--Wenger provides instructional labels with important safety information. Follow all instructions. Only adults may move or set up risers.

Heed all safety instructions.



- **Inspect**--Look for damage or loose items as the risers are set up.
- **Lock riser legs in place**--Make sure that the diagonal brace is properly locked in place, and close cover to ensure legs remain locked. Check to make sure the legs are perpendicular and not at an angle.

Legs must be vertical.

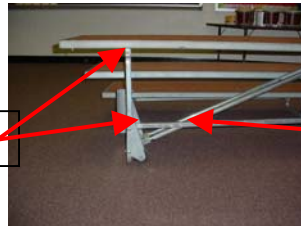

Diagonal brace must be secured.

Diagonal brace must be locked.



- **Test all risers**--Before using risers, stand on each section to ensure stability. Make sure they do not rock or tip.

ANNUAL MAINTENANCE

- **Inspect for damage**--Report damaged risers by submitting a work order request to the Office of Maintenance Services by using the RequestLine.
- **Tighten any loose bolts**--Tighten bolts with care to prevent damaging components. Report missing bolts by placing a work order request to ensure replacement of the same type of bolt.
- **Remove dirt and debris**--Clean carpet lint and dirt from hinges and lock mechanisms.
- **Lubricate all joints**--Use WD-40 spray lubricant on all hinges and moving parts. Flex all moving parts to ensure smooth operation.



For more information, contact Ken Wilson at 571-423-2010